

Digital Full HD Camcorder

MEDION® LIFE® P47010

MEDION®



Instruction Manual

Contents

Safety instructions	2
Danger of injuries	2
Preventing damage to the camcorder	3
The Camcorder	3
Package contents	3
Product description	4
Overview of the appliance	5
Getting started	6
Open the battery and card compartment	6
Inserting and removing the battery	6
Inserting and removing the SC card	6
Close the battery and card compartment	6
Charging the battery	6
Basic operation	7
Switching the camcorder on and off	7
Changing the mode of operation	7
The display in the record mode	7
Making recordings	8
Movies	8
Photos	8
Memory	8
The menu in record mode	9
Using the on-screen menus	9
“Film mode” menu	9
“Camera mode” menu	10
“Effects” menu	10
“Settings” menu	11
Playing back recordings	13
Play back movies on the LCD panel	13
View photos on the LCD panel	13
Playback on a TV set	13
Functions in playback mode	14
Playback functions: movies	14
Playback functions: photos	15
Supplied software	16
Transferring films and photos to a computer	16
Arcsoft MediaImpression	16
YouTube Direct	18
Troubleshooting	19
Cleaning	20
Technical specifications	20
Disposal	21

Safety instructions

- This unit is not intended for use by people (including children) with reduced physical, sensory or mental abilities or for those without experience and/or knowledge, unless they are supervised by a person responsible for their safety or they have been instructed on its use. Children should be supervised to ensure they do not play with this unit.
- Also, keep the plastic packaging out of reach for children to avoid danger of suffocation.

Danger of injuries

Preventing electric shocks

- Never open the camcorder casing or mains adapter plug except to insert the battery.
- Connect the mains adapter plug to a professionally installed 230 V, 50 Hz mains socket.
- To remove the mains adapter quickly and easily from the mains in an emergency, the socket must be easily accessible and close to the appliance.
- Do not bend or crush the mains cable.
- Take measures to prevent moisture or liquid from penetrating the camcorder or mains adapter.
- Do not touch the mains cable with wet hands.
- Never use the camcorder if the mains adapter is damaged.
- Always have repairs carried out by qualified professionals.
- Switch the camcorder off immediately if it malfunctions.
- Do not allow the camcorder or mains adapter to come into contact with rain or be splashed by water.
- Do not place containers containing liquid, e.g. vases, on the appliance, the mains adapter or near to these and protect all parts of the device from rain and water. The container may tip over and the liquid will impair the electrical safety.

Risk of explosion

- Never expose batteries or rechargeable batteries to excessive heat (such as direct sunlight, fire or similar).
- Do not throw batteries into a fire.
- Never short-circuit any (rechargeable) batteries.
- Do not dismantle (rechargeable) batteries.



CAUTION! There is a risk of explosion if rechargeable batteries are replaced incorrectly. Replace only with the same or equivalent type.

Preventing fire hazards

- Always uncoil the entire length of the mains cable.
- Ensure there is adequate ventilation and never cover the mains adapter.
- Do not place naked flames such as lit candles on or near the unit.

Risk of poisoning

- Keep the battery out of reach of children.

Risk of chemical burns

- If the battery is depleted, remove it from the device immediately. There is an increased risk of leakage. Avoid contact with skin, eyes and mucous membranes. If these areas come into contact with battery acid, rinse them immediately with plenty of clean water and contact a doctor immediately.

Preventing damage to the eyes

- Do not use the flash close to anyone's eyes.
- When using the camera function do not direct the flash towards the eyes of people or animals.
- Always maintain a minimum distance of one metre when using the flash, especially with small children.

Preventing damage to the camcorder

- If the battery is leaking, remove it from the camcorder immediately. Clean the contacts before inserting a new battery.
- Use type NP60 lithium-ion batteries only.
- Before inserting the battery, check that the contacts in the camcorder and on the batteries are clean. Clean the battery connections if necessary with a clean, dry cloth or an eraser.
- Do not touch the lens or lens mounting.
- Only use the supplied mains adapter.

Preventing damage to the battery

- Do not reverse the positive (+) and negative (–) terminals to avoid short-circuit.
- Never allow the battery to come into contact with liquids.
- Direct, intense heat can damage the battery. Therefore, do not expose the camcorder to any sources of direct heat.
- If the camcorder is not going to be used for long periods, remove the battery.

Preventing breakages

- Do not drop the camcorder.
- Place the strap around your wrist when carrying the camcorder.

Preventing data loss

- Never interrupt the power supply when data are being processed.

Preventing damage to the SD/SDHC card

- Never withdraw the SD/SDHC card from the camcorder while data are being processed or saved.

Protecting against condensation

- Avoid rapid changes in temperature.
- Place the camcorder in its protective case or a plastic bag before exposing it to any sudden changes in temperature.
- Do not immediately connect the device to the power supply if the unit has been moved from a cold environment to a warm room. The device can safely be connected for charging as soon as the unit has reached room temperature.

Do not use or store the camcorder in direct sunlight or at high temperatures.



At low temperatures, the capacity of the battery can drop significantly due to the reduced speed of the chemical reactions. When recording in cold weather keep a second battery pack in reserve in a warm place (e.g. trouser pocket).



This symbol on the camcorder certifies that the camcorder complies with EU guidelines (European Union) on radiated emissions. CE stands for Conformité Européenne (European conformity)



The camera is for private use only and not intended for use by companies in the heavy industry sector.

The Camcorder

Package contents

Check that the following parts have been supplied in the package:

- Camcorder
- Mains adapter
- USB cable
- HDMI cable
- AV cable
- Pouch
- 2 x Li-Ion rechargeable batteries
- CD with software and instruction manual
- Quick Start Guide and guarantee documents

Product description

This camcorder combines the following functions in one easy-to-use device:

- A digital camcorder
- A digital camera.





Instead of a viewfinder, the camcorder has a high-resolution LC display that enables you to monitor your captures. The LC display also serves to display the on-screen menus where you can make your settings.

The camcorder has a 5x optical zoom and can record video films at a maximum resolution of 1920x1080 (HD) and take photos at 2592 x 1944 (5 Megapixels).

The internal memory has a usable capacity of approx. 74 MB. This means you take photos or shoot short videos even when there is no SD/SDHC card in the camera.

The camcorder can be easily connected to a computer via USB, or to an HD-compatible TV via HDMI.

Overview of the appliance

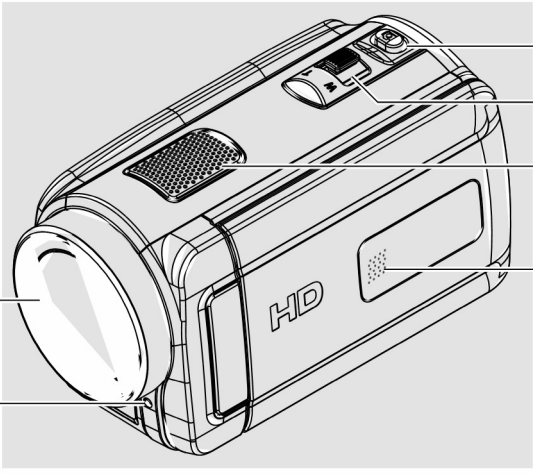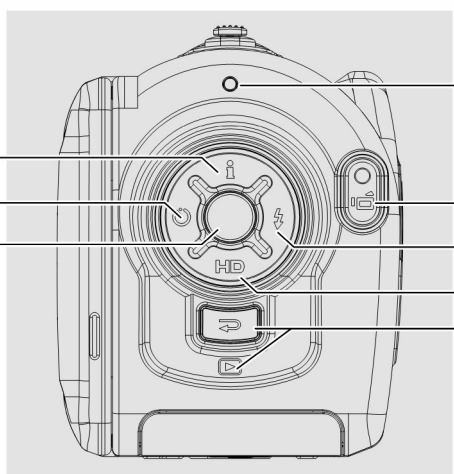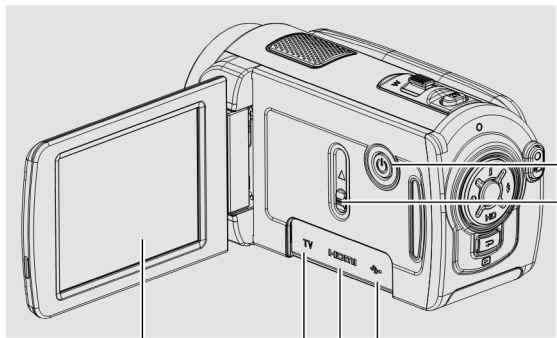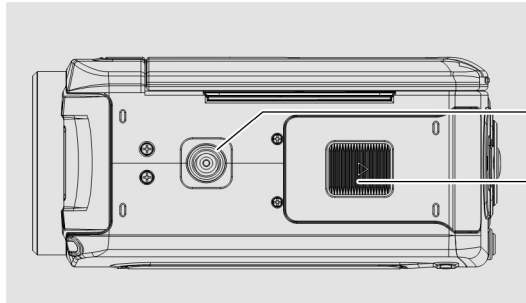Front	Rear
	
<ol style="list-style-type: none"> 1. Lens 2. Self-timer LED 3. Microphone 4. Loudspeaker 5. Rocker switch T/W: T: Telezoom; W: Wide angle 6. PICTURE shutter 	<ol style="list-style-type: none"> 7. Direction button UP; i: switch display information on and off 8. Direction button LEFT; ⌚: Self timer shutter button 9. OK button: confirm selection; open menu 10. Operation LED 11. MOVIE shutter 12. Direction button RIGHT; ⚡: flash for picture mode 13. Direction button DOWN; HD: select resolution for film recordings 14. MODE: Switch between recording and play mode; close the menu
Side view	Bottom
	
<ol style="list-style-type: none"> 15. Power button 16. Ports slide cover 17. Mini USB port, also for mains adapter 18. HDMI port 19. TV port 20. LCD panel 	<ol style="list-style-type: none"> 21. Tripod socket 22. Behind the cover: compartment for battery and memory card

Getting started

Open the battery and card compartment

The compartment for the battery and memory is on the underside of the camera.


- ▶ Hold the camcorder so that the cover to the battery compartment is facing upwards.
- ▶ Slide the cover backwards towards the rear of the device.

Inserting and removing the battery

- ▶ Pull the grey locking lever away from the battery compartment.
- ▶ Insert the battery in the designated compartment as shown (with the lettering facing up).


! Do not reverse the positive (+) and negative (–) terminals to avoid short-circuit.

- ▶ To remove the battery, pull the grey locking lever away from the battery compartment and pull the battery out of the device.

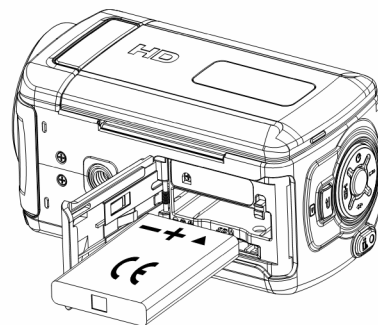

Inserting and removing the SC card

- ▶ Take an SD/SDHC card and insert it into the card slot as shown in the picture.
- ▶ To remove the memory card, press the memory card inwards until you hear a click in the slot and then let go. The memory card will be automatically pushed out a little way from the slot so that you can remove it.

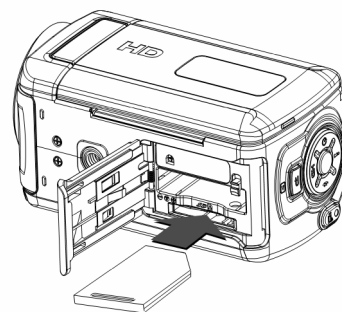

Locking the memory card

If you want to save your recordings on the memory card, make sure that the card is not locked:

Writable position		Write-protected position	
-------------------	--	--------------------------	--

Close the battery and card compartment

- ▶ To close the cover, flip it shut and slide it forwards towards the front end of the camcorder until it clicks into place.

Charging the battery

- ▶ To charge the battery, connect the camcorder to the supplied mains adapter.
- ▶ Plug the mains adapter into a 230 V ~ 50 Hz socket.

i The first complete charging of the battery will take approx. six hours. During charging, the operation LED will blink red.

Observe the safety instructions for batteries in the chapter Safety instructions, section Preventing damage to the battery.

Basic operation

Switching the camcorder on and off

- ▶ To turn on the camera, open up the LCD panel.
The display shows information and the operation LED shines green.
- ▶ To turn the camera off, shut the LCD panel or press the **Power button**.

Changing the mode of operation


The camera has a record and a playback mode.

When you turn the camcorder on, it is in the record mode. You can take photos and films (see Making recordings, page 8).





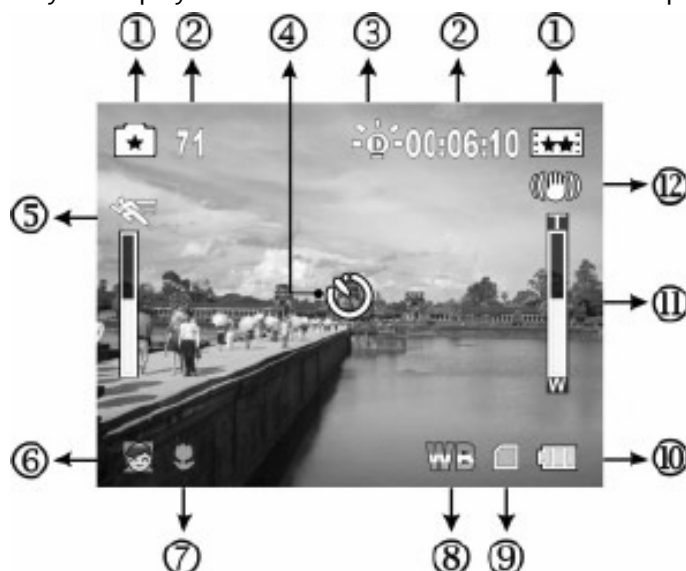

- ▶ To switch from record mode to playback mode, press **MODE**.
- ▶ To switch from playback mode to record mode, press **MODE** again.

The display in the record mode

The indicators shown below may be displayed on the LCD screen while movies and pictures are being recorded:



1	Movie resolution: FH HD (1080p, 30 fps); HD (720p, 30 fps); ★★★ WVGA (60 fps); ★★ VGA (30 fps); ★ QVGA (30 fps)
1	Photo resolution: ★★★ High; ★★ Standard; ★ Low
2	71 Number of images that can still be taken at current resolution
2	14:26:08 Amount of time remaining for recording movie at current resolution
3	⚡ Flash Auto; ⚡ Red Eye Reduction; ⚡ Flash Off; 💡 Digital light: To extend dynamic range for backlit and high-contrast scenes so that the objects will be brighter and clearer
4	⌚ Self-timer
5	👤 Motion detection
6	Scene setting: 👤 Skin; 🌙 Night; 🌅 Backlight; Directly in the display: Black and white, Classic (Sepia), Negative, Auto
7	🔍 Macro functions enabled


8	WB Manual white balance
9	 SD/SDHC card inserted
10	 Battery: full power;  medium power;  low power;  empty battery
11	 Zoom meter: (1080p): 1x~10x (5x optical zoom+ 2x digital zoom). Other resolutions: 1x~20x (5x optical zoom + 4x digital zoom)

Making recordings

Movies

Proceed as follows in order to record films:

- ▶ Lift the LC display flap.
- ▶ Select the desired picture size with the **T/W** button.
- ▶ To start the movie recording, press the **MOVIE shutter**.






 During a movie recording, the microphone is activated. The sound is recorded automatically.


While recording, the recording time is shown in the display (hours:minutes:seconds). At the beginning of the recording, the operation LED briefly lights up red: during recording, it lights up green.

- ▶ To end the movie recording, press the **MOVIE shutter** again.

Photos

Proceed as follows to take photos:

- ▶ Lift the LC display flap.
- ▶ Select the desired picture size with the **T/W** button.
- ▶ If necessary, select a flash  setting:
 -  The flash fires automatically depending on lighting conditions. Use this mode for general photography.
 -  The pre-flash will fire to reduce the red-eye effect.
 -  The flash will not fire under any circumstances. Use this mode when taking images in a place where flash photography is prohibited, or when the subject is distant (beyond the range of the flash).
 -  Digital light: To extend dynamic range for backlit and high-contrast scenes so that the objects will be brighter and clearer.
- ▶ Press the **PICTURE shutter** halfway down (till the focusing frame turns from white to green).
- ▶ Focus your picture and press the **PICTURE shutter** fully down to take picture.

 To take close-up photos, activate the macro function.

Memory

When a memory card is inserted, the recordings are saved on the memory card.

When no memory card is inserted, the recordings are saved in the internal memory.

The menu in record mode


- ▶ To open the menu, press **OK**.

In the main menu you will find four menus, indicated by picture symbols:

- **Film mode**
- **Camera mode**
- **Effects**
- **Setting**

Using the on-screen menus

- ▶ To select a menu, press the direction buttons **LEFT** and **RIGHT**.
- ▶ To move up and down in the on-screen menu, use the direction buttons **UP** and **DOWN**.
- ▶ Select an option in a menu with the direction buttons **LEFT** and **RIGHT**.
- ▶ Confirm a changed setting by pressing **OK** (save changes).

- ▶ You can close the menu at any time with the **MODE** button  .

"Film mode" menu

In the "Film mode" menu, you can make settings for movie recordings.

Resolution

The following settings are available for film quality:

<i>Setting</i>	<i>Resolution</i>
HD (1080 p)	1920 x 1080 (30 fps)
D1 (720 p)	1280 x 720 (30 fps)
WVGA	848 x 480 (30 fps)
VGA	640 x 480 (30 fps)
QVGA	320 x 240 (30 fps)

The selected resolution will remain active until you select a different one.

Stabilization

Reduce the effect of camera shake by using this setting.



Stabilization does not support HD (1080p) and WVGA (60fps).

The recorded image becomes smaller when the stabilization function is activated. The digital zoom is deactivated if the stabilizer function is enabled.

Motion Detect

When this setting is activated, the camera will start to record a video automatically if it detects a movement for at least 3 seconds.

It will stop recording if no movement is detected for at least 3 seconds.

"Camera mode" menu

Resolution

The following settings are available for photo quality:

<i>Setting</i>	<i>Explanation</i>
High	Choose this setting if you want to have the photos printed or enlarged by a laboratory.
Std (standard)	Choose this setting if you want to print the photos or burn them onto a photo CD.
Low	Choose this setting if you want to post the photos on the Internet or e-mail them.

Self-timer

The self-timer allows you to take photographs with a time delay. If, for example, you want to appear on a photograph yourself, you can use the self-timer.

- ▶ In the menu **Self-timer**, select the setting **On**.
- ▶ Close the menu. In the display the symbol for self timer is shown.
- ▶ Press the PICTURE shutter.

After pressing the PICTURE shutter, approx. 10 seconds will pass before the photo is taken. During this time, the self-timer LED blinks slowly. It will blink faster just before the photo is taken.

- ▶ Place the camera on a level surface or use a tripod in order to prevent the shots from being out of focus.




The self-timer setting is active for only one photograph at a time. The camera then returns to normal shooting mode.

"Effects" menu

In the "Effects" menu you can select special effects for movie and picture recordings.

Macro mode

In macro mode, you can make captures at a distance of 1–80 cm.

- ▶ In the **Macro mode** menu, select the **Macro** setting and confirm with **OK**.
- ▶ When the menu is closed, the indicator  will appear in the display.
- ▶ To end macro mode, select the **Normal** setting in the **Macro mode** menu and confirm with **OK**.

Scene

You can select the mode according to the scene condition.

<i>Setting</i>	<i>Explanation</i>
Auto	Shoot without any special effects on the image.
Skin	Shoot with an effect that makes skin tones more natural.
Night	Use Night mode for night scenes or low light conditions.
Backlight	For taking shots when a bright light is behind the subject.
B/W	The image is converted to black-and-white.
Classic	A sepia look is applied to the image.
Negative	The image is converted to the negative of the normal.

WB (White Balance)

The camera adjusts the colour balance of images automatically.

- ▶ If you notice a colour cast in the preview on the LCD panel, you can also change the basic setting.

The following settings are available:

<i>Setting</i>	<i>Explanation</i>
Auto	The camera sets the white balance automatically
Daylight	For shots taken in daylight.
Fluorescent	For shots taken in fluorescent light.
Tungsten	For shots taken in electric light.

ISO

With this function you can adjust the light sensitivity according to the light conditions.

Use a higher ISO value in locations with poor lighting and use a lower ISO value in brightly lit settings.

- ▶ Choose between **Auto**, 800 and 1600.

"Settings" menu

In the "Settings" menu you can adjust the basic settings for the camera.

Sound

Here you can switch the key pad tone on and off.

- ▶ To switch the key pad tones off, select **Off** and press **OK**.

Information

Here you can switch the LCD information on and off.

- ▶ To switch the LCD information off, select **Off** and press **OK**.



You can also use the button **UP (i)** to switch the LCD information on and off.

Time setting

Here you set time and date to have your recordings dated correctly.



The time is display in the 12-hour mode (AM/PM).

- ▶ Select the **Time setting** menu with **OK**. The time menu is displayed. The year is highlighted.
- ▶ Set the value using the **UP/DOWN** buttons.
- ▶ Move to the next field using the **RIGHT/LEFT** buttons.
- ▶ When you set the hours (1–12), make sure **AM** or **PM** is shown correctly.
- ▶ To confirm the settings, press **OK**.

Format

Here you can re-format the memory:

- When a memory card is inserted, the card will be formatted;
- When no memory card is inserted, the internal memory is formatted.



CAUTION!

If you format the memory all the data stored there will be deleted.
Make sure that no important data are in the memory or on the card.

- ▶ Select **Format** and press **OK**. On the display, a security query is shown.
- ▶ To abort the formatting, select **No**. The menu will close and data are saved.
- ▶ To delete the date, select **Yes** and press **OK**. The menu will close and the memory will be formatted.

TV

You can set the camera to various TV systems.

- ▶ Select between **PAL (50 Hz)** and **NTSC (60 Hz)**.
- ▶ To save the settings, press **OK**.

Language

You can use this setting to specify the on-screen menu language.

- ▶ Select the desired setting with the **LEFT/RIGHT** direction button.
- ▶ To save the settings, press **OK**.

Default setting

You can use this function to restore the camcorder's factory settings.

- ▶ Press **OK**.
On the display, a security query is shown.
- ▶ To keep the current settings, select the option **No**.
- ▶ To activate the factory settings, select the option **Yes**.
- ▶ Press **OK**. The menu will close.

Overview of the factory settings

Setting	Factory Setting
Resolution	HD (1080) for movies Standard for photos
Flash	Off
Self-timer	Off
Scene	Auto
Sound	On
Information	On
TV	PAL
Language	English
Volume	Level 12
Macro	Standard

Playing back recordings

Play back movies on the LCD panel

- ▶ Press the button **MODE**. The main menu of playback mode is displayed.
- ▶ Select **MOVIE** using the **RIGHT/LEFT** direction button.
- ▶ Press **OK**.
You see thumbnail previews of the recorded movies. At the top of the display, the movie number and the number of recordings are shown.
- ▶ Select a movie clip using the **RIGHT/LEFT** direction button.
- ▶ Press **OK** to enlarge the preview picture.
- ▶ To start playback, press the **MOVIE shutter**.

Playback functions

- ▶ To start a fast playback forward or backward, press **RIGHT/LEFT**.
- ▶ You can adjust the volume during playback using the **UP/DOWN** button.
- ▶ Press **OK** to pause playback, and resume playback with the **MOVIE shutter**.
- ▶ When playback is finished, press the **MODE** button to return to the preview mode.

View photos on the LCD panel

- ▶ Press the **MODE** button. The main playback mode menu is displayed.
- ▶ Select **PICTURE** using the **RIGHT/LEFT** direction button.
- ▶ Press **OK**.
You see thumbnail previews of the photos. At the top of the display, the photo number and the number of photos are shown.
- ▶ Select a photo using the **RIGHT/LEFT** direction button.
- ▶ Press **OK** to show the photo in full size.

Zoom photos

- ▶ To enlarge the photo, push **T/W** in the direction **T**.
- ▶ To shrink the photo, push **T/W** in the direction **W**.
- ▶ Two rectangles will be displayed, one inside the other. The outer rectangle represents the whole photo. The inner rectangle represents the selected area within the photo. Proceed as follows to select a specific area of the photo for enlargement:
 - ▶ With **UP/DOWN** or **RIGHT/LEFT** move the inner rectangle to the area which you want to enlarge.
 - ▶ To enlarge this area, push **T/W** in the direction **T**.
 - ▶ To shrink the area again, push **T/W** in the direction **W**.

Playback on a TV set

Connect the camcorder to a TV

- ▶ Connect the black plug on the AV cable to the camera's TV output.
- ▶ Connect the white and yellow plugs on the AV cable to the corresponding sockets on the television set.



If you have made recordings in HD format, connect the camera to the digital HDMI input of your TV set using HDMI cables to enjoy the pictures in a high resolution.

Show movies and photos on the TV

- ▶ Switch the television set on. The LC monitor is switched off while the camera is connected to a TV set.
- ▶ Select the movie or photo as described in the previous section.
The recordings are played back on the TV screen.

Functions in playback mode

Playback functions: movies

In movie playback mode, further functions are available.

- ▶ Open a preview picture of a movie (see Play back movies on the LCD panel, page 13).
- ▶ Press **OK**. The playback menu is shown. The following options are available:
 - **Delete**
 - **YouTube direct (to mark a movie for upload to YouTube)**
 - **Repeat one**
 - **Repeat all**

Delete

- ▶ Select **Delete** with **UP/DOWN**.
- ▶ Press **OK** to activate the delete function.
- ▶ To delete the selected movie, press the direction button **DOWN**.
- ▶ To delete all movies, press the direction button **UP**.
- ▶ To carry out the deletion, select **Yes**.
- ▶ To abort the function, press **No**.
- ▶ Press **OK**



If a memory card is inserted, you can delete only the films on the memory card.
If the memory card is locked, you cannot delete the films on the memory card.

YouTube Direct

Here you can mark movies which you want to upload with the software *YouTube Direct*. The programme is described on page 18.

- ▶ Select a preview picture and press **OK**. (If you want to mark a movie which is saved in the internal memory, take out the memory card beforehand.)
- ▶ Select **DOWN** if you want to mark this movie only; select **UP** if you want to mark all movies, and confirm with **OK**.

Repeat one

- ▶ With **UP/DOWN**, select the option **Repeat one**.
- ▶ Press **OK**
- ▶ The movie is played back.

Repeat all

- ▶ With **UP/DOWN**, select the option **Repeat all**.
- ▶ Press **OK**
- ▶ Starting with the currently selected movie, all movies are played back and will be repeatedly endlessly.

Playback functions: photos

In photo playback mode, further functions are available.

- ▶ Show a photo on the LCD panel (see Play back movies on the LCD panel, page 13).
- ▶ Press **OK**. The playback menu is shown. The following options are available:
 - **Delete**
 - **Lock**
 - **Slideshow**

Delete

- ▶ Select **Delete** with **UP/DOWN**.
- ▶ Press **OK** to activate the delete function.
- ▶ To delete the selected photos, press the direction button **DOWN**.
- ▶ To delete all photos, press the direction button **UP**.
- ▶ To carry out the deletion, select **Yes**.
- ▶ To abort the function, press **No**.
- ▶ Press **OK**



If a memory card is inserted, you can delete only the photos on the memory card.
If the memory card is locked, you cannot delete the photos on the memory card.
If the photos to be deleted are locked, you must first unlock them.

Lock (and unlock)

This function enables you to protect individual photos or all photos from accidental deletion.

- ▶ Select **Lock** with **UP/DOWN**.
- ▶ Press **OK** to activate the lock function.
- ▶ To lock the selected photos, press the direction button **DOWN**.
- ▶ To lock all photos, press the direction button **UP**.
The photo or the photos are marked with a lock symbol.
- ▶ To unlock the photos, press **UP** for **all** or **DOWN** for **one**.

Slideshow

This function enables you to have all the photos in the memory displayed in succession (as a slide show).

- ▶ Select **Slideshow** with **UP/DOWN**.
- ▶ Press **OK**. The slide show will start.
- ▶ To stop the slide show, press **OK** again.

Supplied software

System requirements

To use the camera on the computer, the following system requirements must be met:

- Intel Pentium III processor or higher
- Windows XP/Vista
- DirectX 9.0c or higher
- 256 MB RAM
- 1 GB free hard disk space
- 4x CD-ROM drive
- 1 free USB port

Transferring films and photos to a computer

- Photos are saved in the JPG format. They are stored in the directory **DCIM/100PHOTO** in the internal memory or on the SD card.
- Movies are saved in the AVI format. They are stored in the directory **DCIM/100MOVIE** in the internal memory or on the SD card.



These folders are created automatically on the SD card.

To transfer the recordings onto the computer, proceed as follows:

- ▶ Using the cable supplied, connect the camera to the computer's USB connection. The LED in the MOVIE shutter will light up red.
- ▶ Load the films or photos onto your computer.
- ▶ Disconnect the camera from the computer.
- ▶ Remove the USB cable.


Arcsoft MediaImpression

The supplied CD contains the application **Arcsoft MediaImpression**.

Arcsoft MediaImpression helps you burn your movies on DVD.


To create a DVD, proceed as follows:

- ▶ Insert the software CD.
- ▶ Start **Arcsoft MediaImpression**.
- ▶ Click on **Make Movie**.

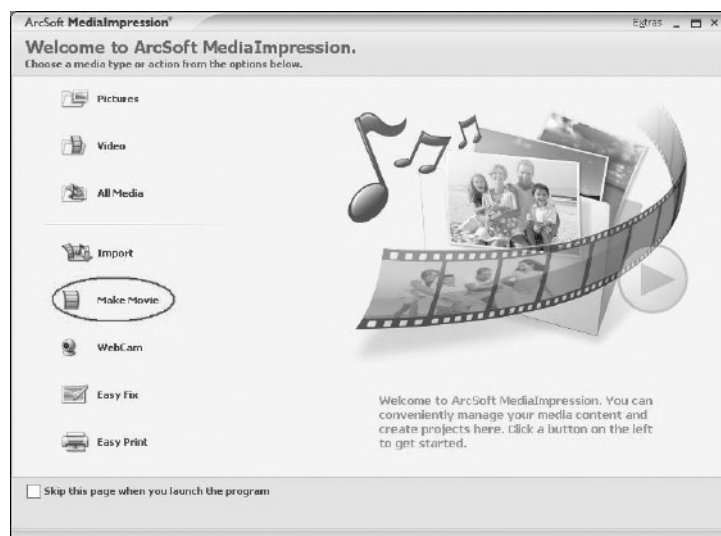

The operation screen will appear:

- ▶ Select the folder that contains the video files you want to burn.
- ▶ Select the files
- ▶ Click button to add files to the slide show.
- ▶ Click **Burn to Disc**.

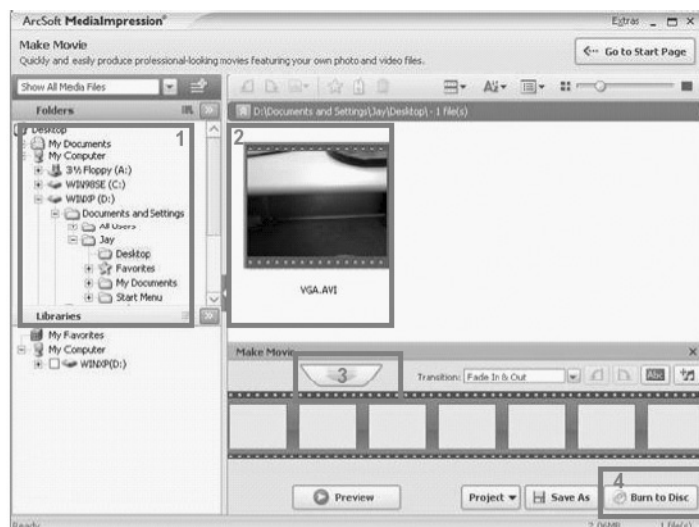

- ▶ Before starting the burning, select the drive with the blank DVD.
- ▶ Now you can create a title in the VCD or DVD menu and add a date. In addition to that, you can allocate a menu design of your choice.
- ▶ Select the file and click **Start** to start the burning.




For a detailed description of the MediaImpression functions, simply press the key F1 during operation.

YouTube Direct

The built-in YouTube Direct application offers you an easy way to upload your video clips directly to YouTube. To do so, you must have an account with **YouTube**.

- ▶ Connect the camera to a PC with Internet access using the USB cable.
- ▶ Among the removable media, select the one with the YouTube symbol (in the picture: K:).


The programme YouTube Direct will open.

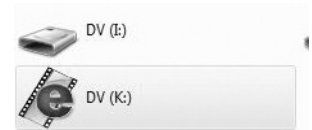

You will see the preview pictures of your films. The marked movies are highlighted with a globe symbol (see menu **YouTube Direct**, page 14).

- ▶ If you want to upload all marked movies, click on the lower push button **Upload DV-selected video to YouTube**.
- ▶ Alternatively, you can mark movies in the preview window and click on the upper push button **Upload selected video to YouTube**.

The window for uploading will open.

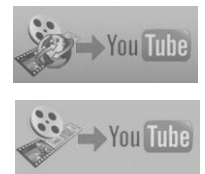

- ▶ Fill in the information in the blanks.

Troubleshooting

Fault	Cause	Remedy
The photos/films are blurred.	Macro mode is enabled.	Disable macro mode.
	The lens is dirty.	Clean the lens.
The photos/films have a colour imbalance.	The white balance is not set correctly.	Select a white balance setting matching the current light conditions.
The photos/films appear in unusual colours.	A special effect is enabled.	Turn the special effect off.
The pictures are too dark or light.	The photos were taken with an inappropriate flash setting.	Select a different flash setting.
	The distance from the subject is too great.	Move closer to the subject.
The photos/films cannot be deleted.	The SD/SDHC is locked.	Unlock the SD/SDHC card.
	The file is locked.	Unlock the file.
The camera will not switch on.	The battery is flat.	Charge the battery
You cannot insert the SD/SDHC card.	The SD/SDHC card is the wrong way round.	Insert the card in the correct direction.
The computer does not recognise the camera.	The camera driver is not installed on the computer.	Install the camera driver.

If none of these tips help to solve the problem, please contact our service address. You will find the details on the last page of this brochure.

Never attempt to open up the device: there are no internal parts requiring maintenance from the user. Unauthorized repairs will render the warranty null and void.

Cleaning

Before cleaning the device, always disconnect it from the mains supply.

Only use a dry, soft cloth to clean the device. Do not use chemical solutions and cleaning products, because these may damage the unit's surface and/or inscriptions.

Technical specifications

Image sensor	5 megapixel CMOS
Modes	HD video camera, digital camera
Lens	F 3.5–3.7 (f = 6.8–34 mm)
Display	3" LCD
TV standard	NTSC/PAL
Data storage media	128 MB internal (partly reserved for the firmware), card slot for SD/SDHC cards up to 16 GB SDHC.
File formats	Picture: JPEG; movie: AVI
Range	Normal: 10 cm~∞ Macro: 1 cm–80 cm picture centre
Zoom	5-times optical zoom
Image resolution	High 4000 x 3000 (12 M; interpolated) Standard 2592 x 1944 (5 M) Low 2048 x 1536 (3 M)
Film resolution	HD: (1080 p) 1920 x 1080 (30 fps) D1: (720 p) 1280 x 720 (30 fps) WVGA: 848 x 480 (30 fps) VGA: 640 x 480 (30 fps) QVGA: 320 x 240 (30 fps)
PC connection	Mini USB 2.0 port
Power supply	NP60 Lithium-Ion rechargeable battery, 1050 mAh, 3.7 V

Disposal

Packaging



To prevent transport damage, your device is packed in packaging.
All packaging materials that are no longer required can and should be recycled.

Appliance



At the end of its life, the appliance should not be disposed of in the normal household rubbish. Please consult your local authority for advice on correct and eco-friendly methods of disposal.

Batteries



Do not dispose of used batteries in household rubbish. Batteries should be taken to a collection point for used batteries.